

<b>S.No</b>	<b>Supported Handsets</b>
1	Asus M530w
2	Asus M930
3	Asus nuvifone M20
4	Asus P525
5	Asus P526
6	Asus P527
7	Asus P535
8	Asus P550
9	Asus P552w
10	Asus P565
11	Asus P735
12	Asus P750
13	BlackBerry 7100g
14	BlackBerry 7100i
15	BlackBerry 7100t
16	BlackBerry 7100v
17	BlackBerry 7100x
18	BlackBerry 7130
19	BlackBerry 7130c
20	BlackBerry 7130g
21	BlackBerry 7210
22	BlackBerry 7230
23	BlackBerry 7270
24	BlackBerry 7280
25	BlackBerry 7290
26	BlackBerry 7510
27	BlackBerry 7520
28	BlackBerry 7730
29	BlackBerry 7750
30	BlackBerry 7780
31	BlackBerry 8100
32	BlackBerry 8110
33	BlackBerry 8120
34	BlackBerry 8220
35	BlackBerry 8300
36	BlackBerry 8310
37	BlackBerry 8320
38	BlackBerry 8330
39	BlackBerry 8700
40	BlackBerry 8707
41	BlackBerry 8800
42	BlackBerry 8820
43	BlackBerry 8900
44	BlackBerry 9000 (Bold)
45	BlackBerry 9500 (Storm)
46	FLY 2040
47	FLY 2040i
48	FLY 2080

49	FLY E300
50	FLY E310
51	FLY M110
52	FLY MP600
53	FLY MX200i
54	FLY MX230
55	FLY MX300
56	FLY SL300M
57	FLY SL400
58	FLY SL500i
59	FLY SL500M
60	FLY SX100
61	FLY SX210
62	FLY SX240
63	FLY SX300
64	FLY SX390
65	FLY T2060
66	FLY V70
67	HPiPAQ 512 (VoiceMessenger)
68	HTC Advantage X7500
69	HTC Advantage X7510
70	HTC MAX 4G
71	HTC MTeoR
72	HTC P3300
73	HTC P3350
74	HTC P3400
75	HTC P3450
76	HTC P3470
77	HTC P3490
78	HTC P3600
79	HTC P3600i
80	HTC P3700
81	HTC P4350
82	HTC P6300
83	HTC P6500
84	HTC S310
85	HTC S620
86	HTC S630
87	HTC S710
88	HTC S730
89	HTC S740
90	HTC Shift
91	HTC T3232
92	HTC T7272 (touch-pro)
93	HTC T7276 (touch-pro)
94	HTC T8282 (touch_viva)
95	HTC Touch
96	HTC Touch 2223
97	HTC Touch 3G

98	HTC Touch Cruise
99	HTC Touch Cruise 09
100	HTC Touch Diamond
101	HTC Touch Diamond2
102	HTC Touch Dual
103	HTC Touch HD
104	HTC Touch Pro
105	HTC Touch Pro2
106	HTC Touch Viva
107	HTC TyTN
108	HTC TyTN II
109	HTC-Touch_Opera
110	i-mate 810-F
111	i-mate JAMA
112	i-mate JAMA 101
113	i-mate JAMA 201
114	i-mate JAMin
115	i-mate JAQ
116	i-mate JAQ3
117	i-mate JAQ4
118	i-mate JASJAM
119	i-mate JASJAR
120	i-mate K-JAM
121	i-mate PDAL
122	i-mate Smartflip
123	i-mate SP4m
124	i-mate SP5
125	i-mate SP5m
126	i-mate SPJAS
127	i-mate SPL
128	i-mate Ultimate 5150
129	i-mate Ultimate 6150
130	i-mate Ultimate 7150
131	i-mate Ultimate 8150
132	i-mate Ultimate 8502
133	i-mate Ultimate 9150
134	i-mate Ultimate 9502
135	iPAQ 514
136	iPAQ 610c
137	iPAQ 910c
138	iPAQ Data Messenger
139	iPAQ h6310
140	iPAQ h6315
141	iPAQ h6320
142	iPAQ h6325
143	iPAQ hw6510
144	iPAQ hw6515
145	iPAQ hw6910
146	iPAQ hw6915

147	iPAQ rw6815
148	iPAQ rw6818
149	iPAQ rw6828
150	iPAQ Voice Messenger
151	LENOVO i909
152	LENOVO i919
153	LENOVO i921
154	LENOVO i966
155	LENOVO P780
156	LENOVO V528
157	LG F2400
158	LG A7110
159	LG B2000
160	LG B2050
161	LG B2060
162	LG B2070
163	LG B2100
164	LG B2150
165	LG C1100
166	LG C1150
167	LG C1300
168	LG C1500
169	LG C2000
170	LG C2100
171	LG C2200
172	LG C2500
173	LG C2600
174	LG C3100
175	LG C3300
176	LG C3310
177	LG C3320
178	LG C3400
179	LG CE500
180	LG CG225
181	LG CG300
182	LG CU320
183	LG CU500
184	LG F2100
185	LG F2300
186	LG F2400
187	LG F7200
188	LG F7250
189	LG F9100
190	LG F9200
191	LG G1600
192	LG G1610
193	LG G1800
194	LG G3100
195	LG G4015

196	LG G4020
197	LG G7050
198	LG KE500
199	LG KE600
200	LG KE770
201	LG KE800
202	LG KE970
203	LG KF510
204	LG KF600
205	LG KG200
206	LG KG200j
207	LG KG300
208	LG KG300j
209	LG KG320
210	LG KG800
211	LG KG810
212	LG KG920
213	LG KP110
214	LG KP220
215	LG KP320
216	LG KP320
217	LG KP500
218	LG KS20
219	LG KU250
220	LG KU380
221	LG KU580
222	LG KU800
223	LG KU950
224	LG KU970
225	LG KU990
226	LG L1200
227	LG L1400
228	LG L3100
229	LG M4410
230	LG M6100
231	LG MG150
232	LG MG200
233	LG P7200
234	LG S5000
235	LG S5200
236	LG U8138
237	LG U8150
238	LG U830
239	LG U8330
240	LG U880
241	Morotola SLVR L72
242	Motorola A1000
243	Motorola A1200
244	Motorola A1200e

245	Motorola A1200i
246	Motorola A1200r
247	Motorola A1600
248	Motorola A630
249	Motorola A732
250	Motorola A760
251	Motorola A768
252	Motorola A780
253	Motorola A810
254	Motorola A845
255	Motorola A910
256	Motorola C261
257	Motorola C550
258	Motorola C650
259	Motorola C975
260	Motorola E1000
261	Motorola E1070
262	Motorola E680i
263	Motorola E770
264	Motorola E770v
265	Motorola K1
266	Motorola K3
267	Motorola KRZR maxx K3
268	Motorola L2
269	Motorola L6
270	Motorola L6i
271	Motorola L7
272	Motorola L71
273	Motorola L7e
274	Motorola L7i
275	Motorola L9
276	Motorola MOTORAZR maxx V6
277	Motorola MOTORAZR2 V8
278	Motorola MOTORAZRV8
279	Motorola MOTOROKR E6
280	Motorola MOTOROKR Z6
281	Motorola MOTOROKRE2
282	Motorola MOTOROKRE6
283	Motorola MOTOROKR-E6
284	Motorola MPX200
285	Motorola PEBL
286	Motorola PEBL U6
287	Motorola Q8
288	Motorola Q9H
289	Motorola RAZRV3X
290	Motorola RAZRV3xx
291	Motorola RAZRV6
292	Motorola RIZRZ3
293	Motorola ROCKER E2

294	Motorola ROKE2
295	Motorola ROKR E2
296	Motorola ROKR-E6
297	Motorola ROKREM30
298	Motorola T720
299	Motorola T725
300	Motorola V1050
301	Motorola V180
302	Motorola V186
303	Motorola V188
304	Motorola V190
305	Motorola V191
306	Motorola V195
307	Motorola V220
308	Motorola V3
309	Motorola V300
310	Motorola V330
311	Motorola V360
312	Motorola V360v
313	Motorola V3I
314	Motorola V3r
315	Motorola V3re
316	Motorola V3t
317	Motorola V3v
318	Motorola V400
319	Motorola V500
320	Motorola V505
321	Motorola V540
322	Motorola V550
323	Motorola V551
324	Motorola V555
325	Motorola V557
326	Motorola V600
327	Motorola V635
328	Motorola V8
329	Motorola V80
330	Motorola V975
331	Motorola V980
332	Motorola W388
333	Motorola W395
334	Motorola W490
335	Motorola W510
336	Motorola Z3
337	Motorola razrV8
338	Nokia 1680c
339	Nokia 2320 Classic
340	Nokia 2323
341	Nokia 2330 Classic
342	Nokia 2600c

343	Nokia 2630
344	Nokia 2660
345	Nokia 2680
346	Nokia 2680 Slider
347	Nokia 2700 Classic
348	Nokia 2760
349	Nokia 3109 Classic
350	Nokia 3110 Classic
351	Nokia 3110 Evolve
352	Nokia 3120 classic
353	Nokia 3230
354	Nokia 3250
355	Nokia 3500 Classic
356	Nokia 3600
357	Nokia 3600 slide
358	Nokia 3610 Fold
359	Nokia 3620
360	Nokia 3650
361	Nokia 3660
362	Nokia 5000
363	Nokia 5070
364	Nokia 5200
365	Nokia 5220XpressMusic
366	Nokia 5300
367	Nokia 5310XpressMusic
368	Nokia 5320XpressMusic
369	Nokia 5500
370	Nokia 5530XpressMusic
371	Nokia 5610XpressMusic
372	Nokia 5630XpressMusic
373	Nokia 5700XpressMusic
374	Nokia 5730XpressMusic
375	Nokia 5800XpressMusic
376	Nokia 6085
377	Nokia 6086
378	Nokia 6101
379	Nokia 6102
380	Nokia 6108
381	Nokia 6110 Navigator
382	Nokia 6111
383	Nokia 6121 Classic
384	Nokia 6125
385	Nokia 6126
386	Nokia 6131
387	Nokia 6131NFC
388	Nokia 6133
389	Nokia 6136
390	Nokia 6151
391	Nokia 6155

392	Nokia 6170
393	Nokia 6210
394	Nokia 6220 classic
395	Nokia 6233
396	Nokia 6234
397	Nokia 6260
398	Nokia 6263
399	Nokia 6267
400	Nokia 6270
401	Nokia 6280
402	Nokia 6282
403	Nokia 6288
404	Nokia 6290
405	Nokia 6300
406	Nokia 6300i
407	Nokia 6301
408	Nokia 6303
409	Nokia 6500 classic
410	Nokia 6500 slider
411	Nokia 6555
412	Nokia 6600
413	Nokia 6600 fold
414	Nokia 6600 slider
415	Nokia 6620
416	Nokia 6630
417	Nokia 6650
418	Nokia 6670
419	Nokia 6680
420	Nokia 6681
421	Nokia 6682
422	Nokia 7020
423	Nokia 7070 Prism
424	Nokia 7100 Supernova
425	Nokia 7210 Supernova
426	Nokia 7260
427	Nokia 7270
428	Nokia 7310 Supernova
429	Nokia 7370
430	Nokia 7373
431	Nokia 7390
432	Nokia 7500 Prism
433	Nokia 7510 Supernova
434	Nokia 7600
435	Nokia 7610
436	Nokia 7610 Supernova
437	Nokia 7650
438	Nokia 7710
439	Nokia 7900 Prism
440	Nokia 8600 Luna

441	Nokia 8800 Arte
442	Nokia 8800 Carbon Arte
443	Nokia 8800 Gold Arte
444	Nokia 8800 Sirocco Edition
445	Nokia 8910i
446	Nokia 9210
447	Nokia 9210c
448	Nokia 9210i
449	Nokia 9290
450	Nokia 9300
451	Nokia 9300i
452	Nokia 9500
453	Nokia E50
454	Nokia E51
455	Nokia E60
456	Nokia E61
457	Nokia E61i
458	Nokia E62
459	Nokia E63
460	Nokia E65
461	Nokia E66
462	Nokia E70
463	Nokia E71
464	Nokia E75
465	Nokia E90 Communicator
466	Nokia N70
467	Nokia N71
468	Nokia N72
469	Nokia N73
470	Nokia N75
471	Nokia N76
472	Nokia N77
473	Nokia N78
474	Nokia N79
475	Nokia N80
476	Nokia N81
477	Nokia N81(8 GB)
478	Nokia N82
479	Nokia N85
480	Nokia N86 (GB)
481	Nokia N90
482	Nokia N91
483	Nokia N91(8GB)
484	Nokia N92
485	Nokia N93
486	Nokia N93i
487	Nokia N95
488	Nokia N95 (8GB)
489	Nokia N96

490	Nokia N96-3
491	Nokia N97
492	Nokia N-GageQD
493	Nokia N-Gage
494	O2 Cosmo
495	O2 Ice
496	O2 XDA Argon
497	O2 XDA Atom
498	O2 XDA Atom Exec
499	O2 XDA Atom Life
500	O2 XDA Comet
501	O2 XDA Exec
502	O2 XDA Flame
503	O2 XDA Graphite
504	O2 XDA Guide
505	O2 XDA Ignito
506	O2 XDA mini S
507	O2 XDA Neo
508	O2 XDA Nova
509	O2 XDA Orbit
510	O2 XDA Orbit II
511	O2 XDA Orion
512	O2 XDA phone
513	O2 XDA Star
514	O2 XDA Stealth
515	O2 XDA Stellar
516	O2 XDA Terra
517	O2 XDA Trion
518	O2 XDA Zest
519	O2 XDA Zinc
520	Panasonic MX6
521	Panasonic MX7
522	Panasonic SA6
523	Panasonic SA7
524	Panasonic VS2
525	Panasonic VS3
526	Panasonic VS6
527	Panasonic VS7
528	Sagem /MyX-6
529	Sagem MyX-7
530	SAGEM myX-8
531	Samsung c130
532	Samsung c240
533	Samsung d300
534	Samsung d357
535	Samsung d410
536	Samsung d410c
537	Samsung d415
538	Samsung d418

539	Samsung d520
540	Samsung d720
541	Samsung d730
542	Samsung d800
543	Samsung d810
544	Samsung d820
545	Samsung d830
546	Samsung d840
547	Samsung d870
548	Samsung d900
549	Samsung e360
550	Samsung e370
551	Samsung e380
552	Samsung e500
553	Samsung e640
554	Samsung e720
555	Samsung e770
556	Samsung e780
557	Samsung e860
558	Samsung e870
559	Samsung e880
560	Samsung e900
561	Samsung F500
562	Samsung GT-I8510
563	Samsung i320
564	Samsung p200
565	Samsung p300
566	Samsung P310
567	Samsung P400
568	Samsung p730
569	Samsung p735
570	Samsung p900
571	Samsung P930
572	Samsung SGH A737
573	Samsung SGH D500
574	Samsung SGH D500C
575	Samsung SGH D500E
576	Samsung SGH D510
577	Samsung SGH D520
578	Samsung SGH D600
579	Samsung SGH D600E
580	Samsung SGH D730
581	Samsung SGH D780
582	Samsung SGH D800
583	Samsung SGH D807
584	Samsung SGH D810
585	Samsung SGH D820
586	Samsung SGH D830
587	Samsung SGH D840

588	Samsung SGH D870
589	Samsung SGH D880
590	Samsung SGH D900
591	Samsung SGH D900i
592	Samsung SGH D900I
593	Samsung SGH D900 ORANGE
594	Samsung SGH E200
595	Samsung SGH E210
596	Samsung SGH E230
597	Samsung SGH E250
598	Samsung SGH E251
599	Samsung SGH E330
600	Samsung SGH E340
601	Samsung SGH E360
602	Samsung SGH E380
603	Samsung SGH E420
604	Samsung SGH E480
605	Samsung SGH E490
606	Samsung SGH E500
607	Samsung SGH E530
608	Samsung SGH E530C
609	Samsung SGH E570
610	Samsung SGH E590
611	Samsung SGH E600
612	Samsung SGH E635
613	Samsung SGH E640
614	Samsung SGH E690
615	Samsung SGH E720
616	Samsung SGH E730
617	Samsung SGH E740
618	Samsung SGH E750
619	Samsung SGH E760
620	Samsung SGH E780
621	Samsung SGH E790
622	Samsung SGH E800
623	Samsung SGH E810
624	Samsung SGH E840
625	Samsung SGH E890
626	Samsung SGH E900
627	Samsung SGH F250
628	Samsung SGH F480
629	Samsung SGH F490
630	Samsung SGH G600
631	Samsung SGH G800
632	Samsung SGH I320
633	Samsung SGH i450
634	Samsung SGH i550
635	Samsung SGH i560
636	Samsung SGH I620

637	Samsung SGH i710
638	Samsung SGH i900
639	Samsung SGH i900 Orange
640	Samsung SGH J150
641	Samsung SGH J210
642	Samsung SGH J600
643	Samsung SGH J610
644	Samsung SGH J700
645	Samsung SGH J700i
646	Samsung SGH J800
647	Samsung SGH L700
648	Samsung SGH L760
649	Samsung SGH M150
650	Samsung SGH M200
651	Samsung SGH M610
652	Samsung SGH P300
653	Samsung SGH P310
654	Samsung SGH P520
655	Samsung SGH P900
656	Samsung SGH U600
657	Samsung SGH U600 Orange
658	Samsung SGH U700
659	Samsung SGH U800
660	Samsung SGH X100
661	Samsung SGH X108
662	Samsung SGH X160
663	Samsung SGH X210
664	Samsung SGH X300
665	Samsung SGH X450
666	Samsung SGH X458
667	Samsung SGH X460
668	Samsung SGH X480
669	Samsung SGH X497
670	Samsung SGH X507
671	Samsung SGH X520
672	Samsung SGH X530
673	Samsung SGH X540
674	Samsung SGH X600
675	Samsung SGH X608
676	Samsung SGH X620
677	Samsung SGH X630
678	Samsung SGH X640
679	Samsung SGH X650
680	Samsung SGH X660
681	Samsung SGH X670
682	Samsung SGH X700
683	Samsung SGH X820
684	Samsung SGH Z107
685	Samsung SGH Z230

686	Samsung SGH Z240
687	Samsung SGH Z400
688	Samsung SGH Z540
689	Samsung SGH Z720
690	Samsung x640
691	Samsung x660v
692	Samsung x680v
693	Samsung x820
694	Samsung X830
695	Samsung Z620
696	Siemens C65
697	Siemens cx65
698	Siemens M65
699	Siemens S65
700	Siemens SF65
701	Siemens SK65
702	Siemens SL65
703	Siemens ST60
704	Siemens SXG75
705	SonyEricsson C702
706	SonyEricsson C902
707	SonyEricsson C905
708	SonyEricsson D750C
709	SonyEricsson D750i
710	SonyEricsson F305
711	SonyEricsson F500i
712	SonyEricsson G502
713	SonyEricsson G700
714	SonyEricsson G900
715	SonyEricsson J300a
716	SonyEricsson J300c
717	SonyEricsson J300i
718	SonyEricsson K300a
719	SonyEricsson K300c
720	SonyEricsson K300i
721	SonyEricsson K310c
722	SonyEricsson K310i
723	SonyEricsson K320i
724	SonyEricsson K500i
725	SonyEricsson K508C
726	SonyEricsson K508i
727	SonyEricsson K510a
728	SonyEricsson K510i
729	SonyEricsson K530i
730	SonyEricsson K550i
731	SonyEricsson K600c
732	SonyEricsson K600i
733	SonyEricsson K608i
734	SonyEricsson K610i

735	SonyEricsson K618i
736	SonyEricsson K660i
737	SonyEricsson K700
738	SonyEricsson K700c
739	SonyEricsson K700i
740	SonyEricsson K750c
741	SonyEricsson K750i
742	SonyEricsson K770i
743	SonyEricsson K790a
744	SonyEricsson K790i
745	SonyEricsson K800i
746	SonyEricsson K810i
747	SonyEricsson K850i
748	SonyEricsson M600i
749	SonyEricsson P1i
750	SonyEricsson P700i
751	SonyEricsson P800
752	SonyEricsson P900
753	SonyEricsson P910a
754	SonyEricsson P910i
755	SonyEricsson P990i
756	SonyEricsson R300
757	SonyEricsson R306
758	SonyEricsson S302
759	SonyEricsson S500i
760	SonyEricsson S600c
761	SonyEricsson s600i
762	SonyEricsson S700c
763	SonyEricsson S700i
764	SonyEricsson S710a
765	SonyEricsson T610
766	SonyEricsson T616
767	SonyEricsson T618
768	SonyEricsson T630
769	SonyEricsson T637
770	SonyEricsson T650i
771	SonyEricsson T700
772	SonyEricsson V630i
773	SonyEricsson V800
774	SonyEricsson W200i
775	SonyEricsson W300
776	SonyEricsson W300i
777	SonyEricsson W350i
778	SonyEricsson W380i
779	SonyEricsson W550c
780	SonyEricsson W550i
781	SonyEricsson W580c
782	SonyEricsson W580i
783	SonyEricsson W595

784	SonyEricsson W600c
785	SonyEricsson W600i
786	SonyEricsson W610i
787	SonyEricsson W660i
788	SonyEricsson W700i
789	SonyEricsson W710i
790	SonyEricsson W760i
791	SonyEricsson W800c
792	SonyEricsson W800i
793	SonyEricsson W810C
794	SonyEricsson W810i
795	SonyEricsson W830c
796	SonyEricsson W830i
797	SonyEricsson W850i
798	SonyEricsson W880i
799	SonyEricsson W890i
800	SonyEricsson W900c
801	SonyEricsson W900i
802	SonyEricsson W910i
803	SonyEricsson W950i
804	SonyEricsson W960i
805	SonyEricsson W980
806	SonyEricsson Z1010
807	SonyEricsson Z250i
808	SonyEricsson Z310i
809	SonyEricsson Z320a
810	SonyEricsson Z500a
811	SonyEricsson Z520i
812	SonyEricsson Z530c
813	SonyEricsson Z530i
814	SonyEricsson Z550i
815	SonyEricsson Z555i
816	SonyEricsson Z558i
817	SonyEricsson Z600
818	SonyEricsson Z608
819	SonyEricsson Z610i
820	SonyEricsson Z710i
821	SonyEricsson Z800
822	SonyEricsson Z800i